


• NetZero Safety Screen Installation Instructions

NetZero Model	Safety Screen Part Numbers	Solo Grace Part Numbers
NZ36F / NZW36F	AA-11-05167	AA-11-05184 – AA-11-05189
NZ40F	AA-11-05190	AA-11-05191 – AA-11-05196
NZ48F / NZW48F	AA-11-04897	AA-11-04898 – AA-11-04903
NZ60F	AA-11-05197	AA-11-05198 – AA-11-05203
NZ72F / NZW72F	AA-11-05204	AA-11-05205 – AA-11-05210

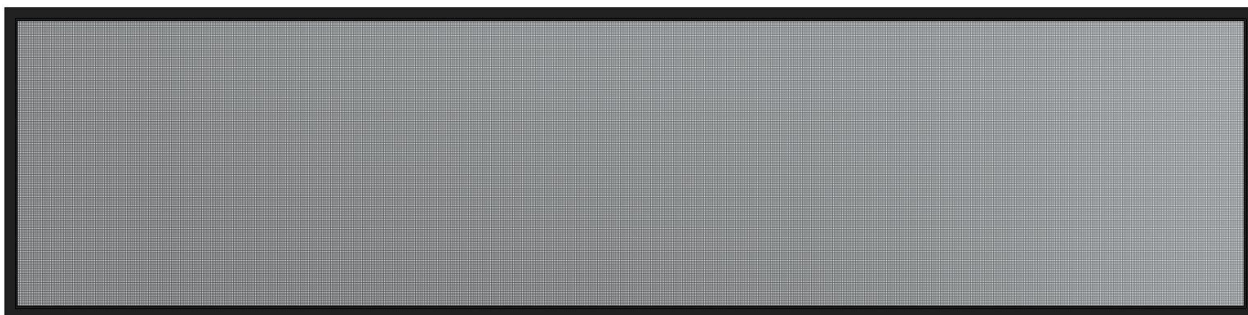

Safety Screen

REQUIRED TOOLS

Phillips Screw Driver

Optional Tools:

1/4" nut driver or rivet gun

 


Table of Contents

REQUIRED TOOLS.....1

FINISHING THE FIREBOX.....3

KIT CONTENTS.....4

MOUNTING THE SAFETY SCREEN OR GRACE FRONT ONTO THE FIREBOX.....5

 ATTACHING BRACKETS TO THE FIREBOX.....5



 ATTACHING THE SCREEN OR GRACE FRONT TO THE BRACKETS5

 REMOVING THE SCREEN OR GRACE FRONT FROM THE BRACKETS.....6

FINISHING THE FIREBOX

The firebox comes with optional finishing guides. These guides install to the front face of the firebox. They provide an edge that can be finished up to with finishing material and will then cover the cut edge of the finishing material. The guides protrude 1/2 inch from the face of the firebox. For the best results use 1/2 inch thick finishing material with the guides.

Install the guides using the included rivets or screws. If using the deflector at the top of the firebox the deflector will serve as the top guide. After installing the guides verify that the guides meet in the corners and that the opening matches the dimensions below.

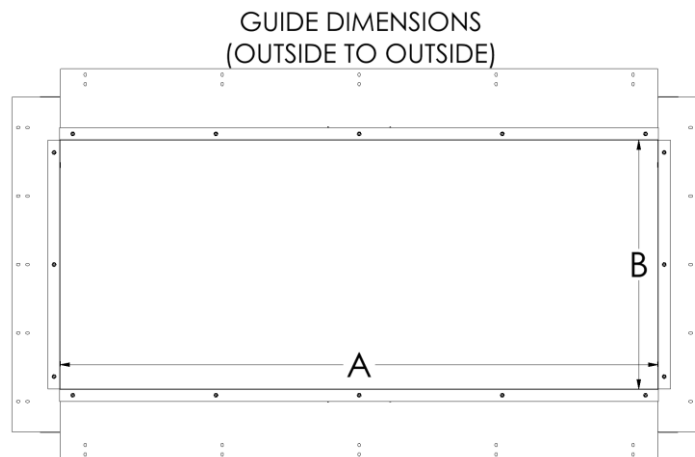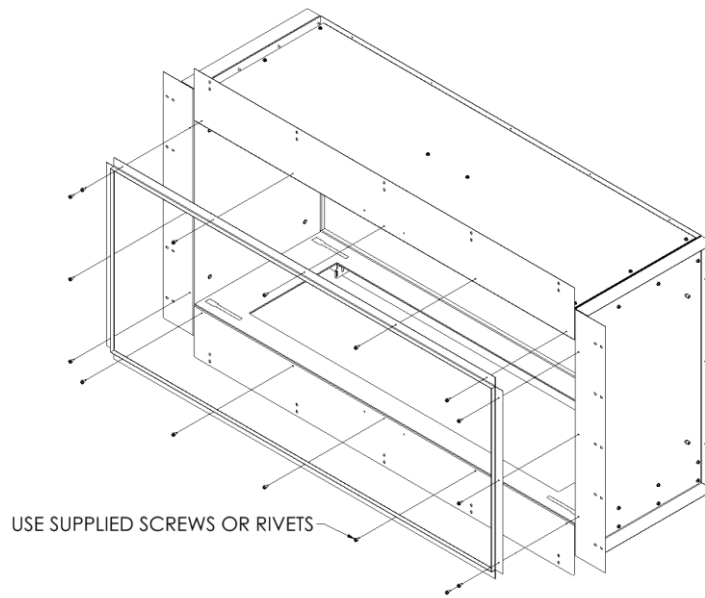


Guide Dimensions		
Firebox	A	B
	(in)	(in)
NZ36F	36-1/16"	20-1/16"
NZ40F	40-1/16"	
NZ48F	48-1/16"	
NZ60F	60-1/16"	
NZ72F	72-1/16"	
NZ90F	90-1/16"	
NZ108F	108-1/16"	

KIT CONTENTS

NOTE: If you have a grace front, the grace frame will be attached to the screen already.

It is not required to use the screen with the grace front. If desired, the screen can be removed by removing the screws on the back of the screen.

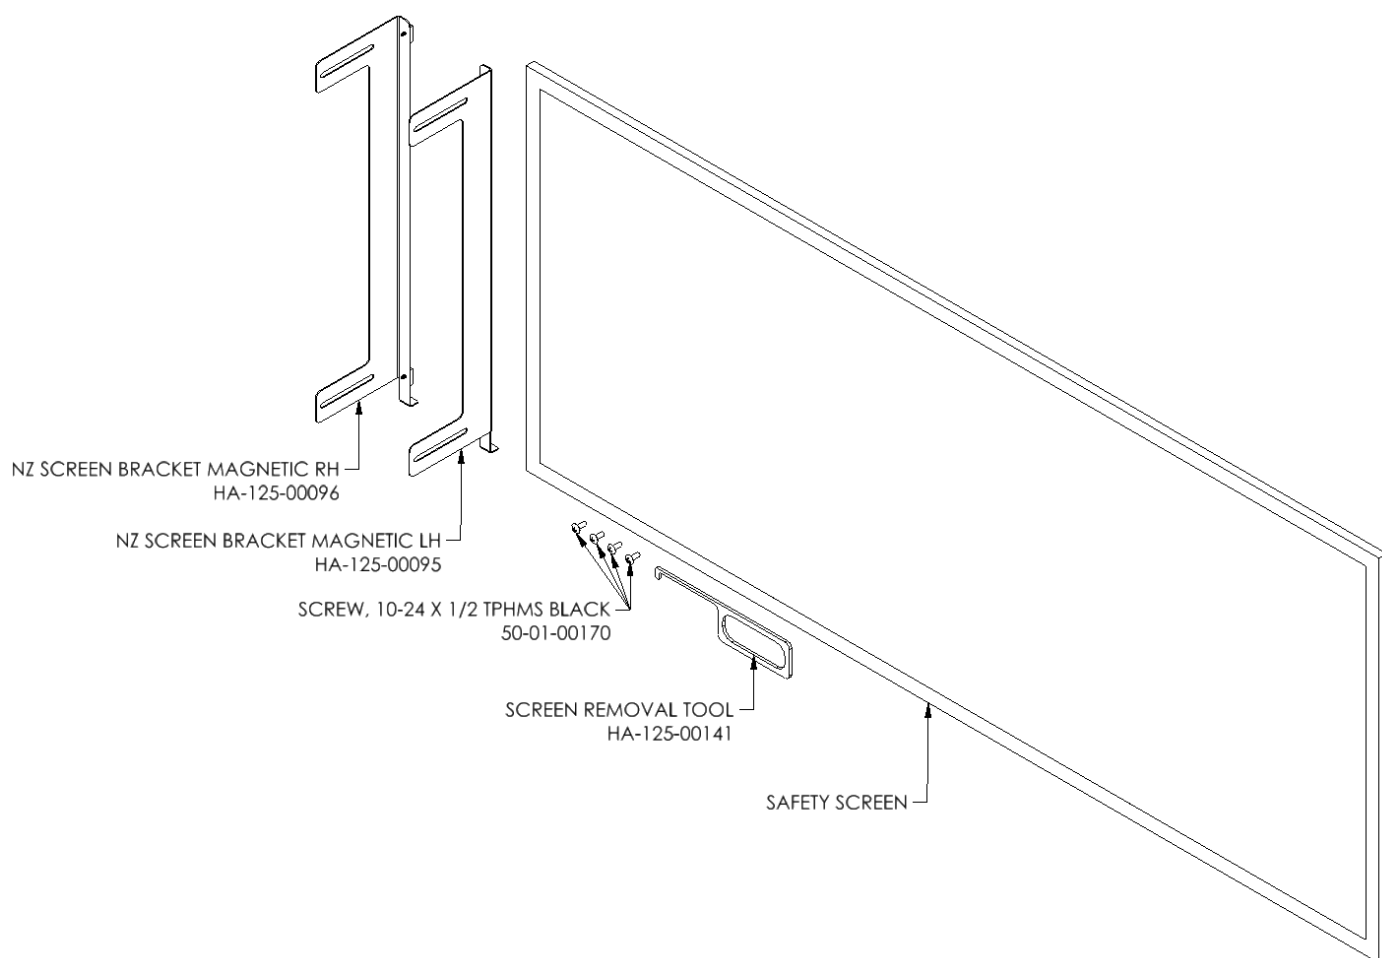


	Replacement Screen for Grace Front	Replacement Screen for Safety Screen	LH Bracket	RH Bracket
NZ36F	HA-125-00142	HA-125-00137	HA-125-00095	HA-125-00096
NZ40F	HA-125-00145	HA-125-00144		
NZ48F	HA-125-00087	HA-125-00084		
NZ60F	HA-125-00148	HA-125-00147		
NZ72F	HA-125-00151	HA-125-00150		

MOUNTING THE SAFETY SCREEN OR GRACE FRONT ONTO THE FIREBOX

ATTACHING BRACKETS TO THE FIREBOX

Attach the brackets to the side of the firebox with the provided screws. The brackets are different for each side. Ensure the screen tab is oriented towards the bottom. Set the hanging brackets to the desired screen or front depth and tighten the screws to the firebox with a phillips screwdriver. The brackets can be set to varying depths, flush with the front of the firebox at a minimum to a maximum of 3" from the face of the firebox.

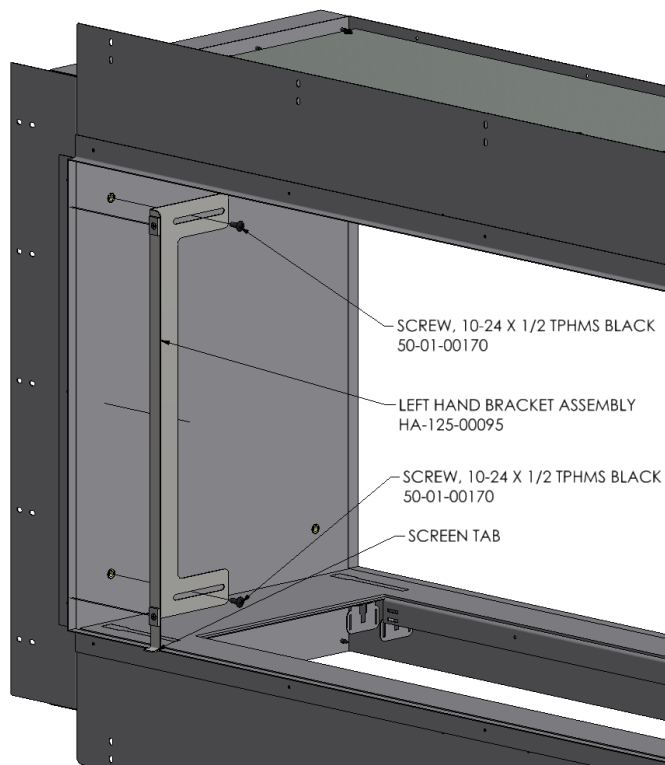

ATTACHING THE SCREEN OR GRACE FRONT TO THE BRACKETS

The screen or grace front is attached to the brackets using magnets. To attach the screen or grace front to the brackets, place the bottom of the screen against the screen tab and gently push the screen or grace front towards the hanging bracket- the magnets will secure it into place. The screen or grace front can be moved up or down slightly to ensure the gap on all sides is consistent. The screen or grace front are symmetrical, there is not a designated top or bottom.



REMOVING THE SCREEN OR GRACE FRONT FROM THE BRACKETS

To remove the safety screen or grace from the magnetic brackets use the screen removal tool.

1. Turn the tool sideways and slide it into the gap between the top guide and the top of the screen until the hook is past the backside of the screen.
2. Rotate the tool 90 degrees to rotate the hook downwards to make contact with the back side of the screen.
3. Pull the tool towards you to disengage the magnetic attraction between the screen and the bracket.

