


• Large Glass Barrier Kit Installation Instructions

AA-11-04768 - GLASS SCREEN FOR NZ36B & NZ40B

AA-11-04755 - GLASS SCREEN FOR NZ48B & NZ90B (X2)

AA-11-04756 - GLASS SCREEN FOR NZ60B & NZ108B (X2)

AA-11-04757 - GLASS SCREEN FOR NZ72B

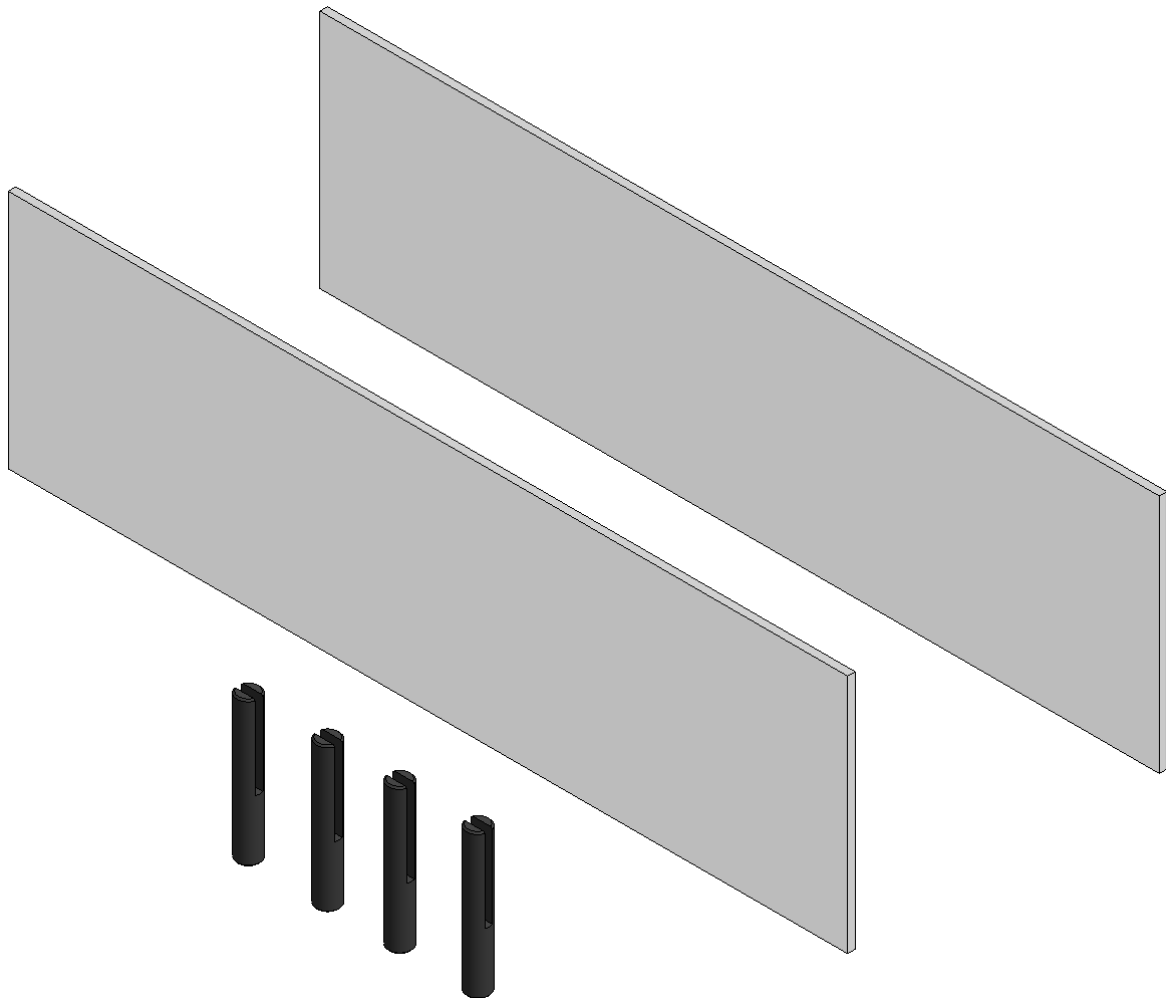


REQUIRED TOOLS





Drill
9/32" Bit


Installing into the Firebox

Start by drilling the 9/32" holes into the firebox. If you are also installing the Rock Tray or LED Light Tray with the Large Glass Barrier the locations of the holes needing to be drilled are already cut into the tray as pilot holes. They will still need to be drilled through the firebox. The locations of the holes to be drilled in the firebox are circled below. You may only need to drill the front set of holes if you are using the single-sided, left-corner, right-corner, or bay configurations.

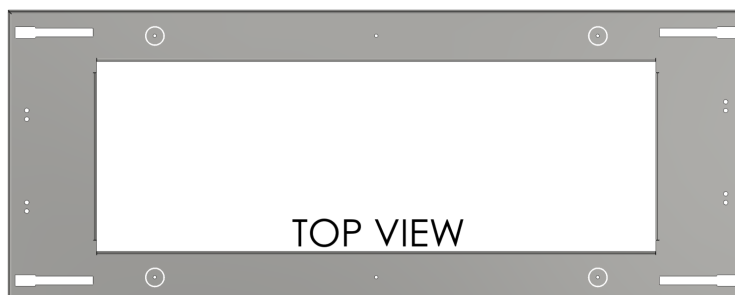

If you are not installing the Rock Tray or LED Light Tray you will have to mark the locations of the holes and drill them. The recommended locations are shown in the chart on the next page for each specific model.

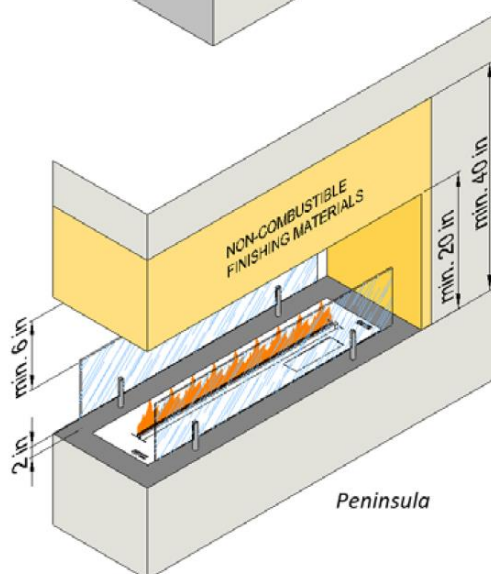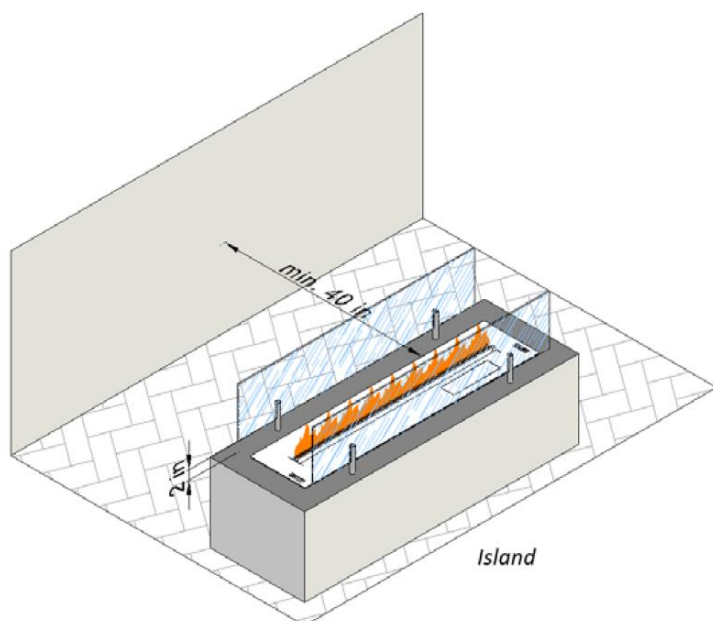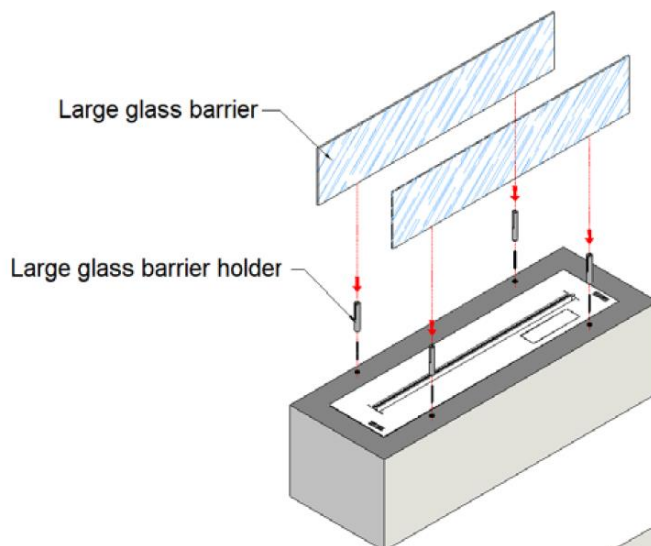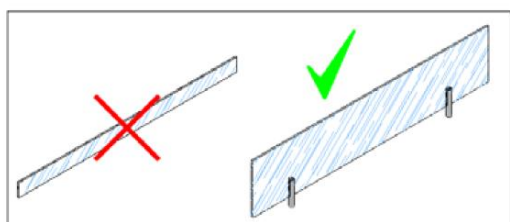

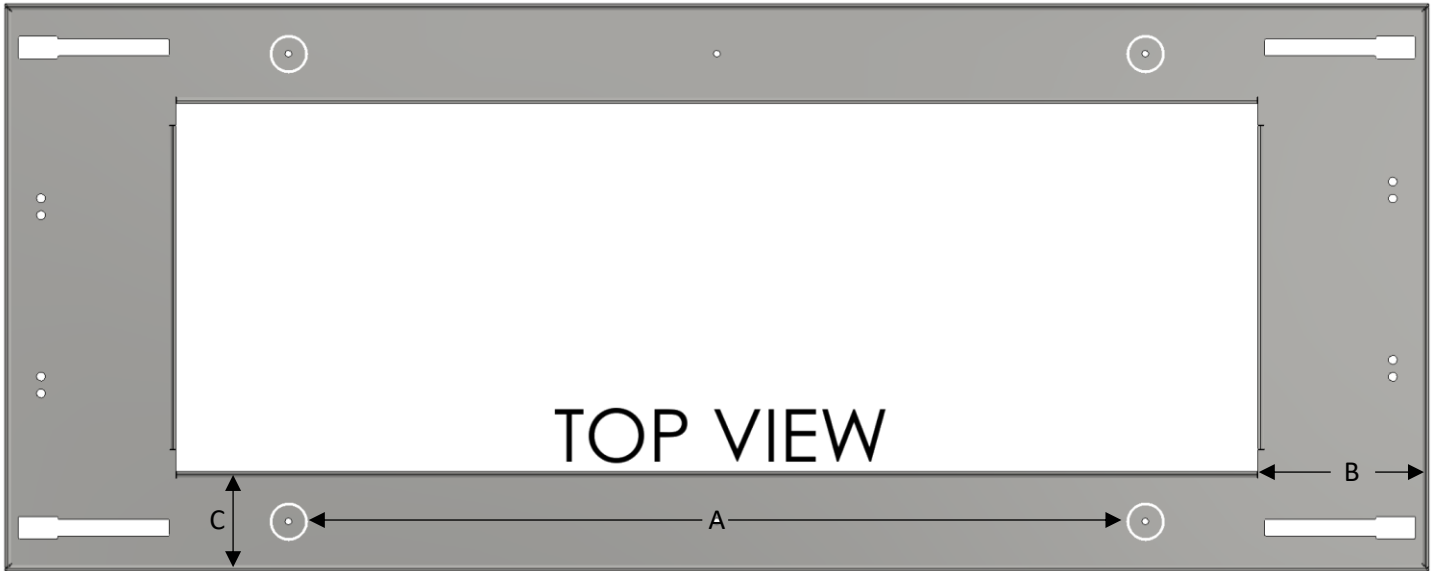

MODEL	A - Distance Between Holes	B - Hole to Side Wall Distance	C - Hole to Front Face Distance
NZPF36	20"	8"	1-3/4"
NZ40	24"		1-3/8"
NZ48	32"		
NZ60	44"		
NZ72	56"		

To install the glass holder, thread the black threaded rod into the bottom of the glass holder. Place the glass holder through the 9/32" holes drilled above and secure from the bottom side with the silver threaded piece included. Tighten until hand tight. Orient the slits in the glass holder so the glass will fit and install the glass to complete installation.

